

## List of Default Router Passwords and Default Router IP Addresses

Lost your **router password** ?

Would like to know the **default password for your router** (sometimes called the *router admin password*), or the **default IP address for your router** ?

Forgot the router password and default router login ?

Look no further – this document lists the default router passwords, default router logins, and default router IP address for all the routers we have come across, whether LAN & WAN routers, wireless routers, DSL/ADSL modem routers, or Cable Modem routers. The default settings listed below are those which these routers have by default out of the box, or which they revert to when you manually reset a router (usually with a paperclip through a pinhole on the router).

Router Name	Default IP Address	Default User Name	Default Password
<b>3Com</b> (3CRWDR100A-72, 3CRWDR101A-75, etc...)	<b>192.168.1.1</b>	n/a	admin
<b>3Com</b>		adminrtd	adminrtd
<b>3Com</b>		admin	n/a
<b>3Com</b>		n/a	PASSWORD
<b>3Com</b>		root	!root
<b>ACC</b>		netman	netman
<b>ACCTON</b>	<b>192.168.2.1</b>	n/a	0
<b>Aceex</b>	<b>192.168.8.1</b>	admin	n/a
<b>Aceex</b>	<b>10.0.0.2</b>	admin	epicrouter
<b>Actiontec</b>		n/a	n/a
<b>ADC Kentrox</b>		n/a	secret
<b>Adtran</b>		n/a	n/a
<b>AirLink+</b>	<b>192.168.1.1</b>	admin	admin
<b>Aiway</b>		0	n/a
<b>Allied Telesyn</b>		root	n/a

<b>Allied Telesyn</b>		Manager	Friend
<b>Allnet</b>		admin	admin
<b>Ambit</b>	<b>192.168.100.1</b>	user	user
<b>Ambit</b>	<b>192.168.100.1</b>	admin	password
<b>Ambit</b>		root	n/a
<b>Amitech</b>		admin	admin
<b>Apple</b>	<b>10.0.1.1</b>	n/a	n/a
<b>Arescom</b>		n/a	atc123
<b>Arescom</b>	<b>192.168.1.1</b>	dsladmin	n/a
<b>Ascend</b>		admin	ascend
<b>Ascend</b>		n/a	ascend
<b>Ascom</b>			
<b>Asmack</b>		admin	epicrouter
<b>ASUS</b>	<b>192.168.1.1</b>	admin	admin
<b>Avaya</b>		root	root
<b>Bausch Datacom</b>	<b>10.0.0.2</b>	admin	epicrouter
<b>Bay Networks</b>		User	n/a
<b>Bay Networks</b>		Manager	n/a
<b>Bay Networks</b>		Manager	Manager
<b>Belkin</b>	<b>192.168.2.1</b>	n/a	n/a
<b>Belkin</b>		admin	n/a
<b>Benq</b>		Admin	admin
<b>Bintec</b>		admin	bintec
<b>Boson</b>		n/a	n/a
<b>Broadlogic</b>		admin	admin
<b>Broadlogic</b>		installer	installer
<b>Broadlogic</b>		webadmin	webadmin
<b>Buffalo</b>	<b>192.168.11.1</b>	root	n/a
<b>Cable &amp; Wireless</b>		Admin	1234
<b>Cabletron</b>		netman	n/a
<b>Cabletron</b>		n/a	n/a

<b>Canyon</b>		Administrator	admin
<b>Canyon</b>	<b>192.168.62.1</b>	admin	1234
<b>Cayman</b>		Any	n/a
<b>Cisco</b>		cisco	cisco
<b>Cisco</b>		n/a	san-fran
<b>Conexant</b>		n/a	admin
<b>Conexant</b>		n/a	epicrouter
<b>Dell</b>	<b>192.168.1.1</b>	admin	admin
<b>Digicorp</b>		n/a	BRIDGE
<b>Digicorp</b>		n/a	password
<b>D-Link</b>	<b>192.168.0.1</b> <b>192.168.0.30</b> <b>192.168.0.50</b>	n/a	n/a
<b>D-Link</b>	<b>192.168.0.1 or</b> <b>192.168.1.1</b>	Admin	Admin
<b>D-Link</b>		n/a	admin
<b>D-Link</b>		admin	n/a
<b>D-Link</b>		user	n/a
<b>D-Link</b>		n/a	1234
<b>D-Link</b>		n/a	year2000
<b>E-Con</b>		admin	epicrouter
<b>Edimax</b>		admin	1234
<b>Efficient</b>		login	admin
<b>Efficient</b>		admin	admin
<b>Efficient Networks</b>		n/a	hs7mwxxx
<b>Elsa</b>		n/a	cisco
<b>Ericsson (Formerly ACC)</b>		netman	netman
<b>E-Tech</b>		n/a	admin
<b>E-Tech</b>	<b>10.0.0.2</b>	admin	epicrouter
<b>Flowpoint</b>	<b>192.168.254.254</b>	n/a	admin
<b>Flowpoint</b>		n/a	password
<b>Fujitsu Siemens</b>		n/a	connect

<b>Gateway</b>		admin	admin
<b>IBM</b>		n/a	ascend
<b>Infosmart</b>		admin	0000
<b>Intel</b>		admin	hello
<b>Intel</b>		NICONEX	NICONEX
<b>Intel</b>		n/a	babbit
<b>Ipstar</b>		admin	operator
<b>JAHT</b>	<b>10.0.0.2</b>	Admin	epicrouter
<b>Linksys</b>		Administrator	admin
<b>Linksys</b>	<b>192.168.0.1</b> <b>192.168.1.1</b> <b>192.168.1.225</b> <b>192.168.1.226</b> <b>192.168.1.245</b> <b>192.168.1.246</b>	n/a	admin
<b>Linksys</b>	<b>192.168.1.1</b> <b>192.168.1.251</b>	admin	admin
<b>Livingston</b>		!root	n/a
<b>MacSense</b>		admin	admin
<b>Medion</b>		n/a	medion
<b>Microsoft Broadband Networking Routers</b> also known as "Base Station" routers	<b>192.168.2.1</b>	admin	admin
<b>Microsoft Broadband Networking Routers</b> also known as "Base Station" routers		n/a	admin
<b>Mikrotik</b>		admin	n/a
<b>Motorola</b>		cablecom	router
<b>Motorola</b>		admin	motorola
<b>Motorola</b>		admin	password
<b>Netgear</b> (All DSL modem routers, cable modem routers, and LAN routers from 2005 onwards)	<b>192.168.0.1</b>	admin	password
<b>Netgear</b>	<b>192.168.0.227</b>	admin	password

<b>Netgear</b>		n/a	1234
<b>Netgear</b>		Admin	1234
<b>Nokia</b>		m1 122	m1 122
<b>Olitec</b>		admin	admin
<b>Olitec</b>		admin	adslolitec
<b>Pentagram</b>		admin	password
<b>Pentagram</b>		n/a	pento
<b>Pirelli</b>		admin	mu
<b>Pirelli</b>		admin	microbusiness
<b>Pirelli</b>		user	password
<b>Siemens</b>		superuser	admin
<b>Sitecom</b>	<b>192.168.0.254</b>	admin	admin
<b>Sitecom</b>	<b>192.168.0.1</b>	n/a	sitecom
<b>SmartSwitch</b>		admin	n/a
<b>SMC</b>	<b>192.168.2.1</b>	n/a	n/a
<b>SMC</b>		admin	admin
<b>SMC</b>	<b>192.168.2.25</b>	admin	smcadmin
<b>SMC</b>		n/a	smcadmin
<b>SMC</b>		admin	barricade
<b>SMC</b>		cusadmin	highspeed
<b>SMC</b>		n/a	0000
<b>SMC</b>	<b>192.168.2.1</b>	n/a	n/a
<b>Speed Touch (Alcatel)</b>	<b>10.0.0.138</b>	Administrator	n/a
<b>Speedstream</b>		admin	admin
<b>T-Comfort</b>		Administrator	n/a
<b>Teledat</b>		admin	1234
<b>Telekom Malaysia</b>		ZXDSL	ZXDSL
<b>Telekom Malaysia</b>		ADSL	expert03
<b>Teletronics</b>	<b>192.168.1.1</b>	admin	1234
<b>Telnet</b>	<b>192.168.1.1</b>	n/a	n/a
<b>UNEX</b>		n/a	password

<b>US Robotic</b>	<b>192.168.123.254</b>	admin	admin
<b>US Robotic</b>		admin	n/a
<b>US Robotic</b>		root	12345
<b>US Robotic</b>		n/a	12345
<b>Westell</b>		admin	sysadmin
<b>X-Micro</b>		super	super
<b>X-Micro</b>		1502	1502
<b>Xyplex</b>		n/a	access
<b>Xyplex</b>		n/a	system
<b>Yakumo</b>		admin	admin
<b>Zyxel</b>		admin	admin
<b>Zyxel</b>	<b>192.168.1.1</b>	admin	1234
<b>Zyxel</b>		n/a	1234
<b>Zyxel</b>		n/a	n/a

ooooooooOoooooooooooooooo